

AweSome T3 Telecaster Upgrade Left-Hand Information


Updated: 04-21-2017

The following T3 telecaster upgrade information is for the left hand customer.

Left-handed customer can request the Volume-Tone controls are mounted so the Tone control is towards the rear and the Volume control is towards the neck of the instrument. The two controls will still be right-hand controls, but they will be positioned like your stock controls.

In addition, the below information identifies how to connect each of the four pairs of pickup coils to the green solderless terminal strip; as well as which pickup coil each switch controls.

The below figure shows the special left-hand layout of our T3 Telecaster upgrade.

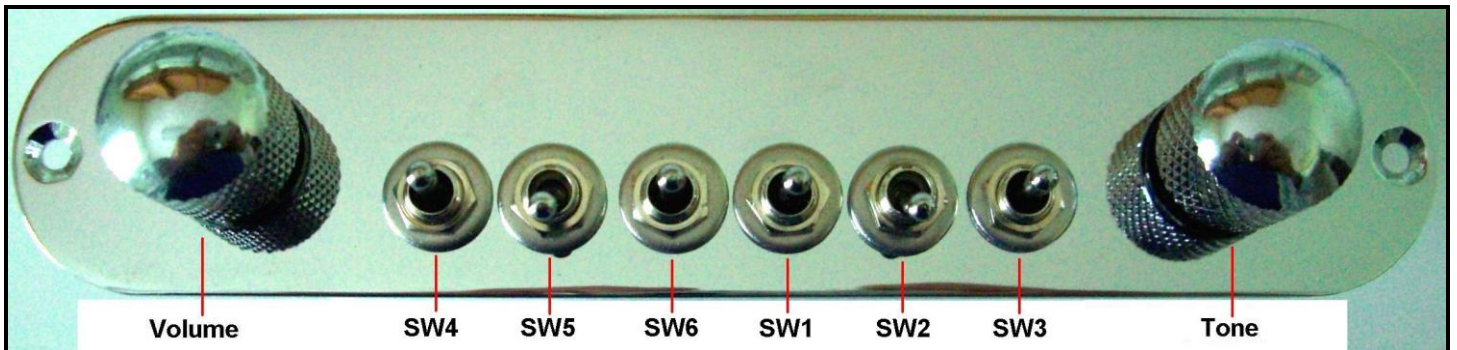

For your instrument with three pickups, the following pickup wire pairs are attached to the marked connection of the green solderless terminal strip. This is done so the layout of the three separate pickups on the guitar (from rear to front) match the switches.

Neck Pickup Coil - attach the pickup wires to the green terminal strip marked Coil-1
Middle Pickup Coil - attach the pickup wires to the green terminal strip marked Coil-2
Bridge Pickup Coil - attach the pickup wires to the green terminal strip marked Coil-3

For the Left-Hand user, the following switches control the identified coils. This "reversal" applies to the normal pickup tone mapping worksheet.

SW1: Controls the Neck Pickup.
SW2: Controls the Middle Pickup.
SW3: Controls the Bridge Pickup.

SW4: Puts the Middle and Neck pickups in Series when Up, in Parallel when down.
SW5: Puts the Bridge and Neck pickups in Series when Up, in Parallel when down.
SW6: Puts the Bridge and Middle pickups in Series when Up, in Parallel when down.
SW4 and SW6: Puts all three pickups in Series when Up, in Parallel when down.